

DÉCOR KH11 & KH22

Mounting and Fixing instructions.



DÉCOR radiators are high performance, universal radiators that come with a choice of connection options;

- Top bottom same end (TBSE)
- Top bottom opposite end (TBOE)
- Bottom bottom opposite end (BBOE).

These instructions show you how to correctly install the radiator based on your connection requirements.

IMPORTANT: Screws must be fastened and tightened as shown in this document. Failure to correctly fasten the screw will result in the product not functioning correctly and may cause the product to leak.

Contents*

Your DÉCOR radiator comes with a pack of brackets and screws that contains the following:

- A** Brackets for horizontal models x 4 (or 6 for larger radiators)
- B** Short plug screws*
- C** Long separating screw (red end)*
- D** Decorative screw covers*
- E** Anti vibe clip (horizontal and vertical only)
- F** Plug and vent
- G** Allen key


Please unpack and carefully check the contents, in the event that items are missing please contact MYSON immediately and do not commence the installation.

*quantities vary depending on the model. For full details see table below.

Table of model variations

Model	No. of screws required
Horizontal KH11	2 (1 on each side)
Horizontal KH22	4 (2 on each side)

Bracket packet kit for horizontal models.

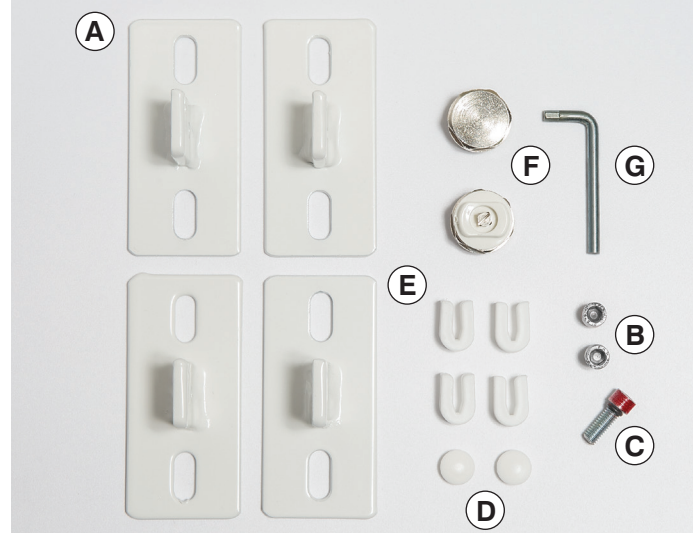



Installation

For the correct water flow, the screws must be fitted, and secured, as demonstrated in the diagrams below. The longer, separating screws (with a red end) will direct the water flow through the radiator, while the smaller metal screw plugs will blank off the unused tappings (see Fig 1).

Once the screws are fitted, cover with the decorative screw caps supplied (see Fig 2). The radiator is now ready to be mounted to the wall or floor. Fit the anti-vibe clip to the bracket as shown in Fig 3, and then affix the radiator to the wall using the brackets supplied (measurements can be found in the Universal Instructions found in the packaging).



Fig 1.




Fig 2.




Fig 3. Horizontal & vertical models only

DÉCOR Horizontal Flow and Return


TBSE

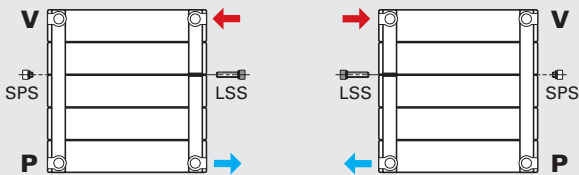

TBOE

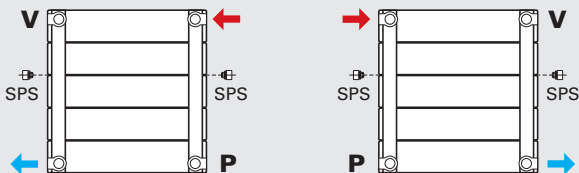

BBOE

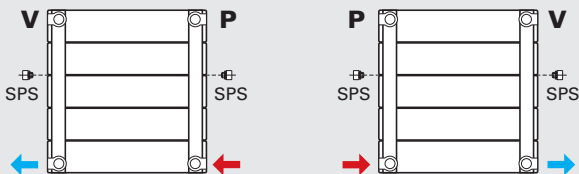

KEY

- Flow water inlet
- Flow water outlet
- V** Vent
- P** Plug
- LSS Long Separation Screw (red end)
- SPS Short Plug Screw